



Multi-functional Waterer Installation and Usage Instructions(WB4030KAH)

• Precautions for installation and operation


1. This model offers three mounting options. Please choose the appropriate installation method based on your specific requirements as they are similar in nature.

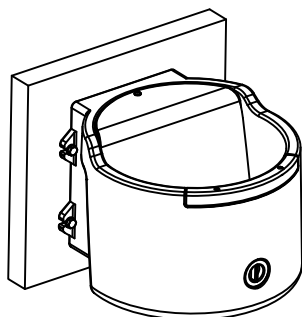

WALLS

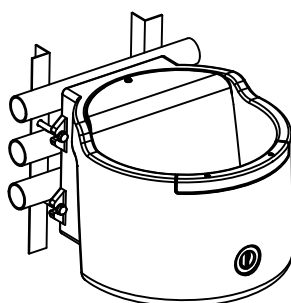

HORIZONTAL FENCE

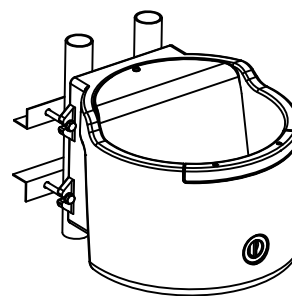


VERTICAL FENCE

2. The inlet end for water is located on the right-hand side of this model by default. Please ensure to take note of the position of the mains water pipe prior to installation.
3. The galvanized fixed bracket, stainless steel bolts, and stainless steel braided hose mentioned in the installation instructions are optional additional purchases. Please inform the sales personnel if needed.
4. The water inlet pressure for this product should not exceed 0.5mpa. If local water pressure is too high, please inform the salesperson in advance.

• -Product Assembly and Installation

-Check the accessories: Generally, we pre-assemble the product at the factory, with the exception of the water inlet assembly. You can view all the accessories required for the water dispenser here. If any are missing, please contact your sales representative.

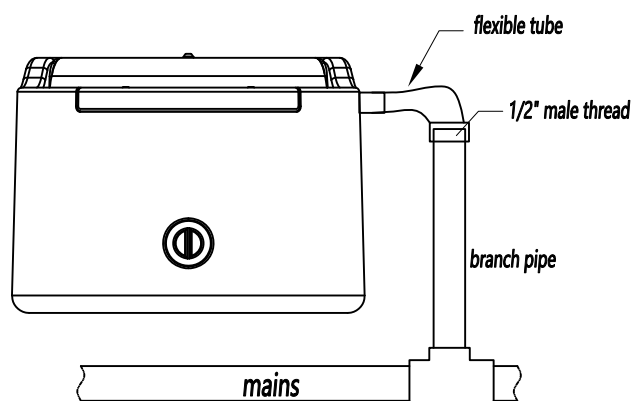


A、Schematic diagram of water line installation

Packing List

No.	Accessories	Qty
1	Drinker body	1
2	Drinker lid	1
3	Float valve	1
4	Flexible piping 0.5in*40cm	1
5	Lid screws M8*14	1
6	Drain plug	1
7	Heater	1
8	Heater cable - 3m length	1
9	GFCI plug	1
10	Float valve(spare)	1
11	Drain plug(spare)	1

Instructions for Installation of the Multi-functional Waterer:


- 1、 Select a location with a level surface that can accommodate the waterer's size. Mount the waterer on the wall. Refer to the diagram for installation dimensions.
- 2、 Install the water supply valve and connect it to the waterer's inlet using an flex pipe.
- 3、 Turn on the main water supply and check for any leaks.
- 4、 Adjust the regulator to obtain the desired water pressure.
- 5、 Fill the waterer with water and adjust the float so that the water level is within your desired range.
- 6、 Connect the device's power supply and switch on the power.
- 7、 The device is ready to use.

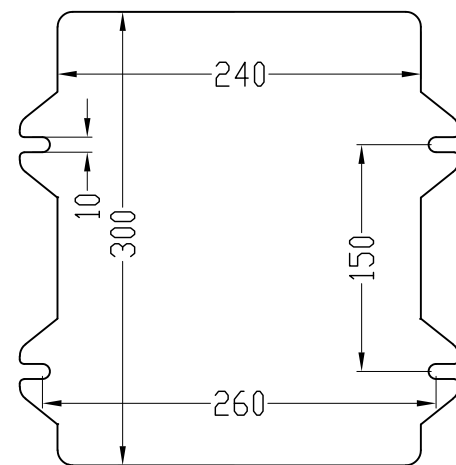

B、 Installation Hole Size

Electrical component

- 1、 Install a three-prong outlet on the wall or a pillar near the waterer, Ensure that the outlet's ground wire is functioning properly
- 2、 We have provided a 3-meter waterproof cable for you; please make sure the outlet is not too far from the water dispenser.
- 3、 Reserve a conduit for wiring near the three-prong outlet , with a minimum of 1 inch distance. Run the wire through the conduit.
- 4、 Connect the cables and plug the GFCI plug into the outlet.
- 5、 Ensure the waterer is free from debris before filling it with water for use.
- 6、 The water heater should only be turned on when the waterer is full of water.
- 7、 Please read the heater' s instruction manual before use.

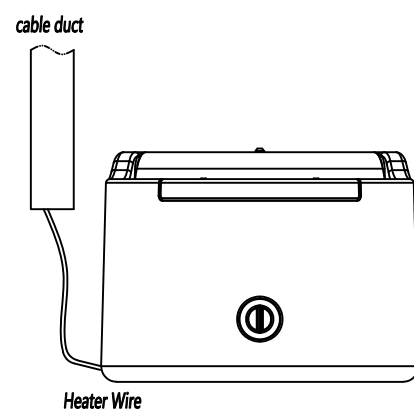

C、 Circuit Installation Schematic

● Troubleshooting

MALFUNCTION	POSSIBLE CAUSES	PRESCRIPTION
NO WATER FLOW	1、 Water pressure problems	Inspection of water supply units
	2、 Clogged water valve strainer	Cleaning filters
	3、 Water valve float low	Adjusting float height
WATER VALVE WON'T SHUT OFF	1、 Impurities in water valves	Clean water valve and add pre-filter
	2、 Damaged water valve	Replacement of water valves
	3、 Excessive water pressure	Reduced water pressure
NON-HEATING	1、 Line fault	Check power supply and cables
	2、 Water temperature is high	Wait for the water to cool
	3、 The water level is too low	Fill the waterer with water
	4、 Heater failure	Checking or renewing the heater

If you have any problems during use, please consult "Troubleshooting", if the problem cannot be solved, please contact the salesperson.